

This document is for illustrative purposes only, detailed specifications will be agreed at the time of purchase.

Access

- Access to the operator rack on a 24x7x365 basis (under the terms of the SLA)
- Security includes 24x7x365 monitoring of the facility, with secure access.
- Different levels of supervised access available as per SLA
- Unsupervised access is also an option upon completion of an accreditation course

Service Delivery

- enet offers rack space to operators who wish to PoP the co-location and use an aggregation point for their services
- Rack space can be leased in increments of 2U or carriers can install their own rack on a designated foot print within the co-location if they wish

enet Responsibilities

enet is responsible for

- The operation and maintenance of the co-location facility;
- Supplying generators to the site if DC power fails.

enet reserve the right as part of preventative maintenance programme to interrupt AC supply to test the generator on site.

Customer Responsibilities

The Customer is responsible for the use of inverters to convert DC to AC is advisable if AC needs to be used.

Further Information

For solutions to all your wholesale needs, contact your enet Account Manager or contact us at:

Email: salesupportteam@enet.ie
Telephone: + 353 (0)61 274000
Webpage: www.enet.ie